

SHERCO

RACE TUNING 4 STROKE RANGE



CAUTION!

Before modifying the vehicle to a competition version, please ensure that your customer orders a signed repair order from the workshop in which you inform the customer of the risks and cancel the vehicle's authorisation for use on public roads.

Please do not discard the removed parts and give them to the customer.

Note : This manual is exclusively reserved for the SHERCO network, any distribution is forbidden.

MATERIEL INSTALLATION

In the photo below, you'll find all the elements necessary for the installation of the Racing Kit.



- This Kit included :
 - Switchs Key Less and Front light
 - Battery BS Lithium
 - The oxygen sensor connector cap
 - Plastic cap for cover the Neiman emplacement
 - Rear brake sensor removal screw
 - Handlebar protection

In order to install of the above elements, you will need to have the tools that's listed below



MATERIEL INSTALLATION

List necessary tools :

- A torque Wrench
- 3 Allen keys (3-4-5mm)
- 1 spring puller
- 1 T-key socket 8mm
- 2 sockets (7-19mm)
- 4 flat wrenches (10-12-14-17)
- 1 Philip screwdriver
- 1 flat screwdriver
- 1 pair of cutting pliers
- 1 pair of pliers
- 1 long bent-ose pliers

The estimated time for installing the SHERCO® Racing kit is 2 hours.

HEADLIGHT PLATE

1. Front indicator removal

To remove the indicators, it's necessary to remove the headlight plate. Detach the two rubber straps on either side of the fork.



Once the straps are detached, grab the headlight plate by pulling it, upwards to unclip the 2 plastic pins.

Be careful to not pull the headlight plate further as, this could damage the front light and indicator connectors located behind it.



Then remove the two power terminals from each of the indicators.



Remove the square power terminal from the front light.



HEADLIGHT PLATE

Once the front light connector is disconnected, you can remove the front headlight plate assembly.




Place the headlight on a workbench to remove the indicators. Using a flat wrench, remove the turn signal mounting nut.





Before reassembling the headlight plate, the Neiman must be removed in order to install the KeyLess system.

2. Neiman removal

The Neiman is connected to the motorcycle by a 2pin terminal (red and black wire) and two single wire terminals (red and black).

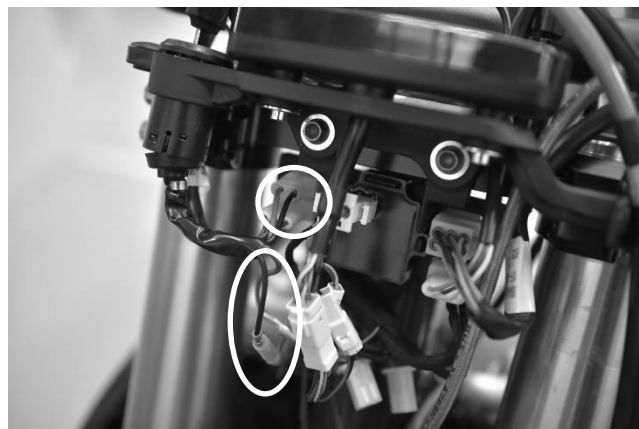

In order to not lose the starter function, reconnect the two remaining red wires on the motorcycle.

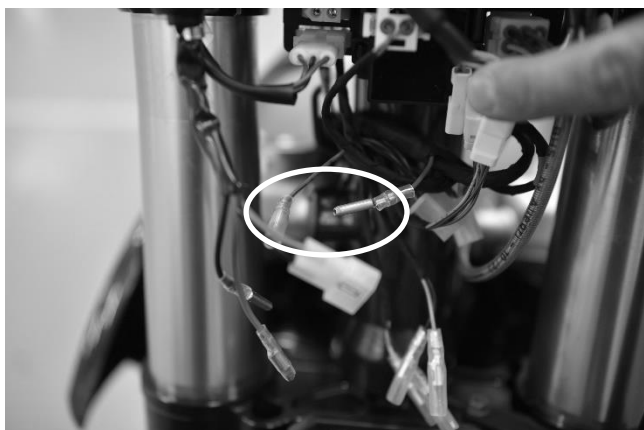

KEYLESS SYSTEM

You can now remove the Neiman. It is fixed by two plastic notches on each side. Use left/right translation movements to remove it from its two fixing notches.



Take the neiman cover cpa and insert it into the Neiman location.



3. Removal of original left control panel

Use a Philips screwdriver to remove the screw securing the half-shells of the control switch located below the handlebar.




KEYLESS SYSTEM

Uncouple the two half-shells.




Disconnect the two terminals from the switch (1 x 6-pin and 1 x 3 pin terminal).

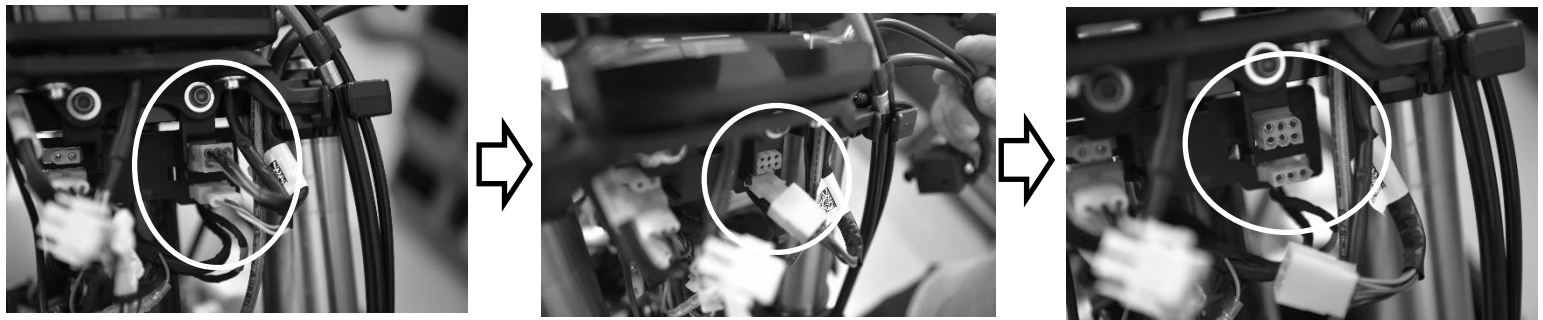

Remove the rubbers securing the switch harness

Extract the switch by passing the terminal on the top, between the upper plate fork and the speedometer.

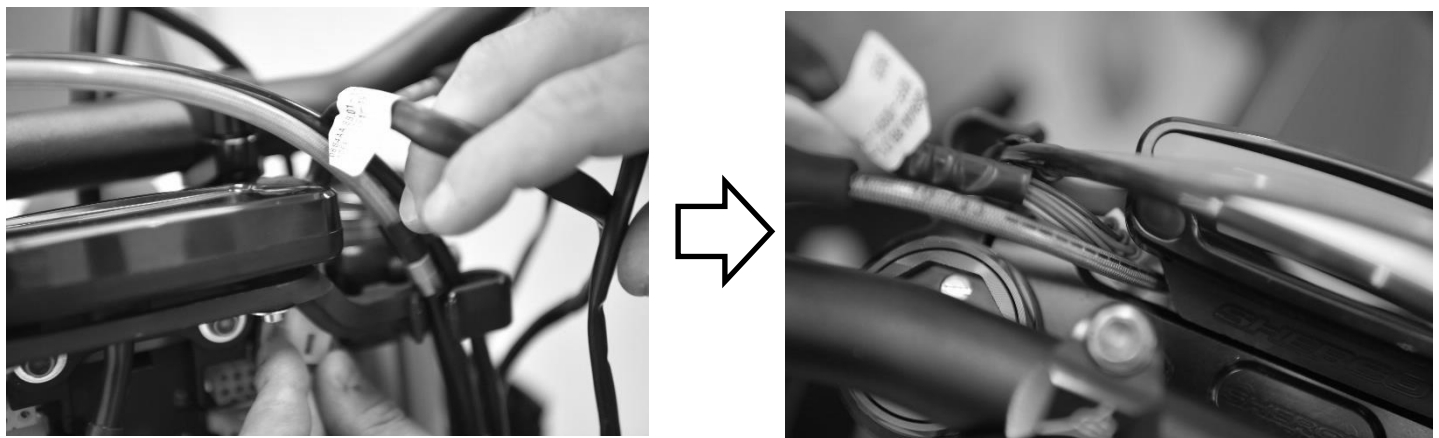

KEYLESS SYSTEM

Remove the handebar switch



4. Central indicators removal

The central indicators is located behind the headlight plate between the two suspension tubes.



Disconnect the 2 pin terminal.



All you have to do is remove the central unit from its housing bu removing it from its palstic notch and pulling it towards you.



KEYLESS SYSTEM

5. Installation KeyLess switch

You will need to install two switches for the KeyLess system

1. Front light switch
2. Engine stop switch



Front light switch installation, use an Allen key
It is positioned to the right of the clutch lever



Be careful when passing the wire with the clutch fluid, so as not to damage it.



KEYLESS SYSTEM

Connecting the starter switch

Pass the wire between the speedometer and the upper plate fork.




Connect terminal 6 pins.



Connecting the engine stop switch

Install the engine stop button to the left of the clutch lever attachment.
Pay attention to the direction of the mounting collar



KEYLESS SYSTEM

Pass the stop button wire under the handlebar, joining the starter switch wire.

You will need to connect the black and purple wires of the two switches.



Place a rubber collar recovered from the original switch to properly secure the two switch harness.




Refitting the headlight plate

Use the space of the central unit to accommodate the electrical wires so as not to damage them when refitting headlight plate.

Connect the square terminal of the front light power supply.

Place the headlight plate in front of its pins, then push it lightly to clip it.

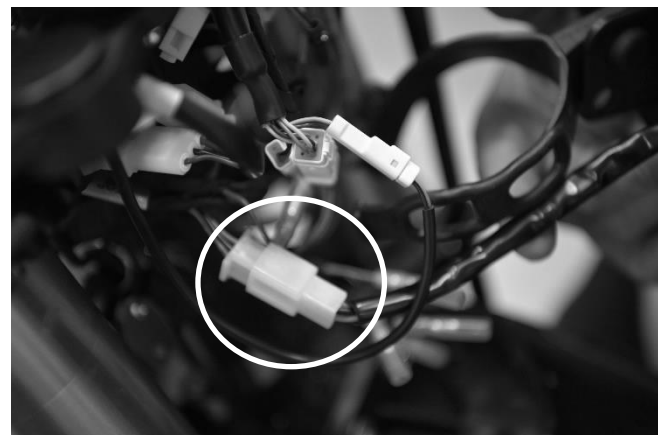

KEYLESS SYSTEM

Proceed to the reverse step of disassembly, replace the two rubbers securing the headlight plate.




Horn removal

The horn is fixed on the right radiator guard. To remove it, it's necessary to remove the radiator guard

Remove the screw holding the guard.



Then separate the right side of the tank, the radiator guard

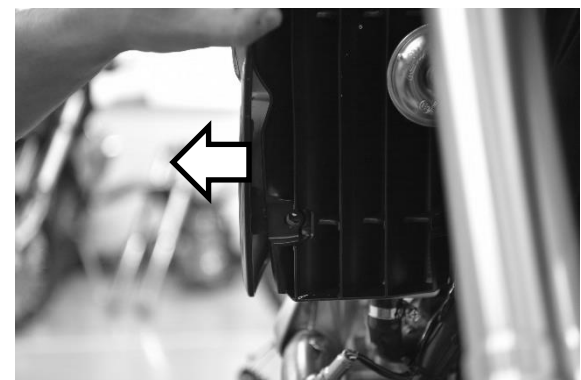


You can unclip the radiator guard from its housing



HORN REMOVAL


You now have access to the horn power terminals. Disconnect both terminals

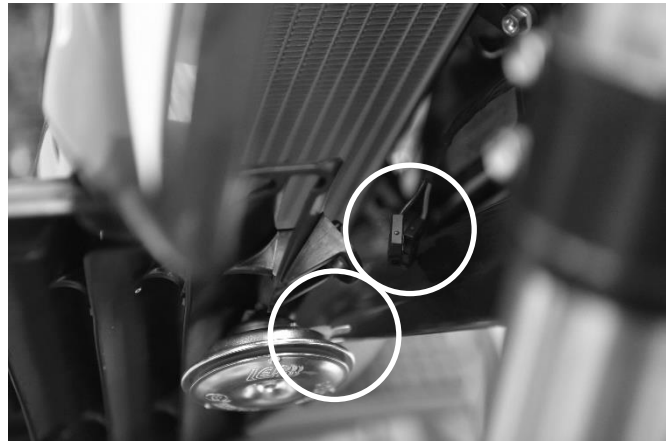

The horn is held screwed to a clip. Grasp it and unscrew it by hand.



Remove the horn from its clip.

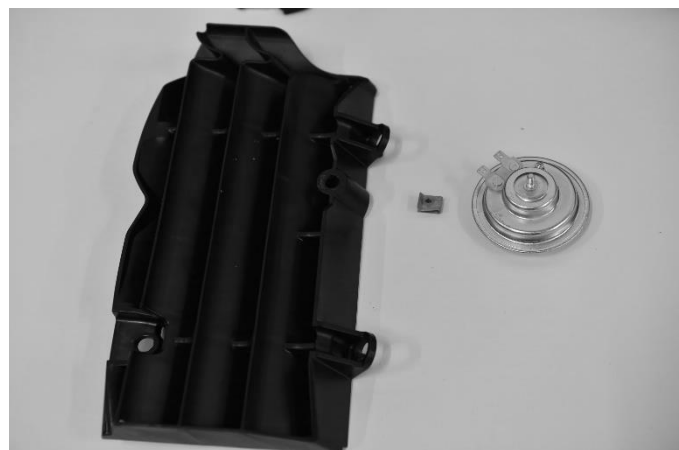

OXYGEN SENSOR REMOVAL

To disassemble the oxygen sensor i twill be necessary to remove the following elements :

- Left and right radiator guard
- Seat
- Tank

Remove the left radiator guard. Same procedure as the right guard.

Using an 8 mm socket, remove the retaining screw located at the bottom right side.



Remove the left radiator guard


Seat removal

Remove the two fixing screw on either side of the seat



Grasp the seat on the front and pull it backwards to release the hook located on the tank.

Remove the seat

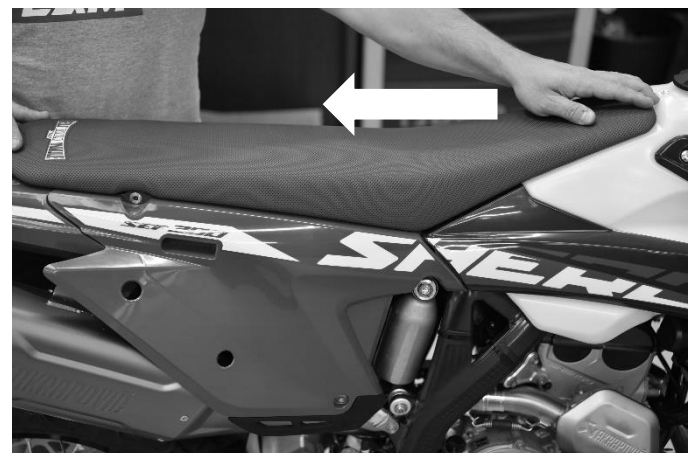

OXYGEN SENSOR REMOVAL

Tank removal


Before removing the tank, it is necessary to disconnect the electrical and fuel supply from the fuel pump.

The pump is located to the left of the tank.

Disconnect the 3-pin terminal located under the fuel pump.



Disconnect the fuel pump supply hose by pressing on the clips while pulling forward.

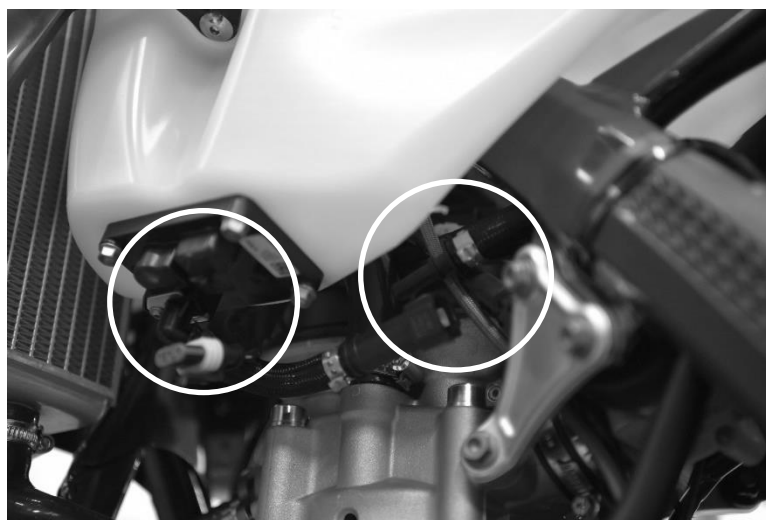

The tank is fixed by 3 screws, one of which is central with 1 silentbloc, and 2 lateral screws. Unscrew the 3 fixing screws.



OXYGEN SENSOR REMOVAL

Stand to the left of the motorcycle, grasp the sides plastics of the tank, one in each hand, and spread them slightly outwards while pulling the tank backwards

Remove the tank



Once the tank is removed, you have access to the oxygen sensor.

The sensor is located in the frame between the two radiators. Disconnect the 4-pin terminal from the lambda sensor.



Take the terminal cap provided in the kit and install it on the lambda terminal.



OXYGEN SENSOR REMOVAL

Reinstall the terminal inside the frame in its original location.

Cut the Rilsan holding the oxygen sensor on the frame.




Using a 17mm flat spanner unscrew the oxygen sensor.

Remove the oxygen sensor.



Take the cap and its washer provided in the kit.

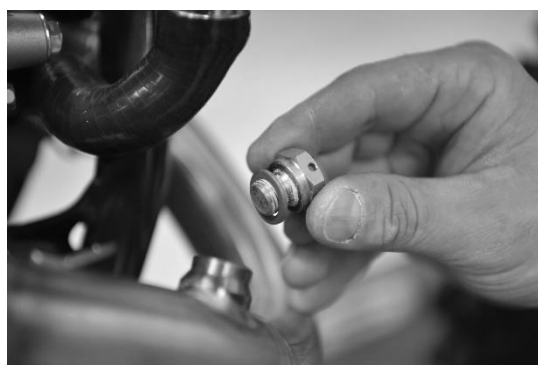


Using a torque wrench and a 19 mm socket, tighten the probe cap to a torque of 20 Nm.



CATALYST REMOVAL

Using a spring puller, remove the 3 collector retaining springs in order to separate the collector in two and remove the catalyst.

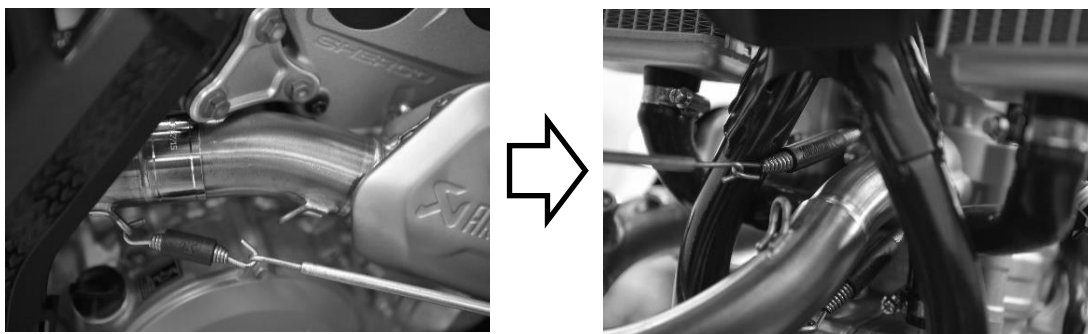

Grab the front manifold and make translational movements to separate it in two. Once separated, remove the catalyst.



Reassemble the collector in the reverse order of disassembly. Replace the 3 springs

Remove the rear brake switch

Remove the right frame protection. Cut the 4 Rilsan and unscrew the fixing screw.




REAR BRAKE WITCH REMOVAL

Remove the rear brake sensor nut using a 14mm flat wrench.



Then disconnect the tow-pin terminal located behind the frame.



Take the banjo bolt.



Using a 12mm socket torque wrench, tighten the bolt to a torque of 20 Nm.

Re-bleed the rear brake fluid completely.




PLATE SUPPORT REMOVAL

Reverse the removal, refit the right frame protection, the tank, the two radiator guard.


Remove the two side headlight plates held by a screw at the bottom right.



Disconnect the two square terminals located behind the right side plate.

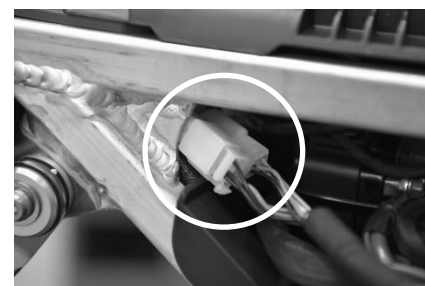

Remove the two 8mm screws located under the rear light and the 4 plastic screws holding the license plate holder.

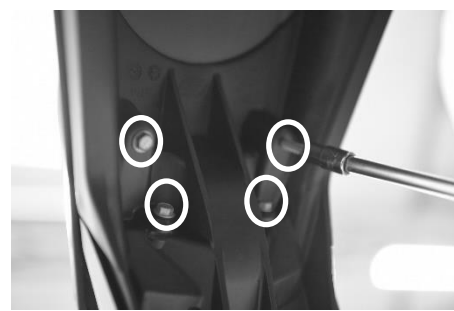

Separate the mud flap from the rear mudguard.



PLATE SUPPORT REMOVAL

To remove the mud flap and the plate support, remove the two terminals through the hole provided for this purpose, spread the mud flap slightly and remove the two terminals.



Place the mud flap on a workbench and remove the rear light.



Remove the plate support consisting of the plate light and the indicators.



Refit the two plastic screws.

Assemble the rear mud flap by passing the tail light power supply terminal.




PLATE SUPPORT REMOVAL

Screw the two remaining plastic screws under the mud flap.



Using a pair of angled pliers, grasp the terminal to reconnect it to motorcycle harness.
Be careful to not damage it by tightening too hard.



the

Reconnect the terminal.


Tighten the two screws with Loctite® blue threadlocker.



Reassemble the right side plate.

INTAKE

- Remove intake restriction and install filter basket



CHAIN PROTECTOR REMOVAL

Removing the side stand spacer

Remove the side stand fixing screw and remove the spacer.



Remove the chain guard


Remove the chain quick release



Remove the chain



Remove the two chain guard mounting screws.
One of which is located inside the swing arm.

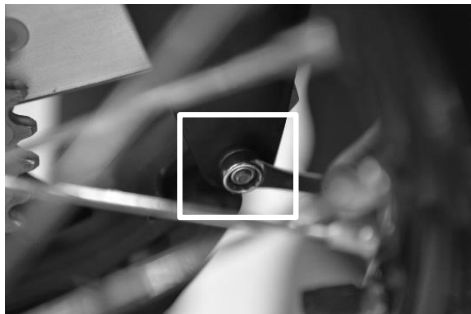

CHAIN PROTECTOR REMOVAL


Reinstall the two screws with Loctite® blue threadlocker.



Reassemble the chain and its connecting link.



Installation of handlebar protection foam

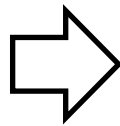

KIT RACING

In the photo below you will find all the elements that had to be removed in order to switch the bike to the non-homologated Racing configuration.



UPADTE MAPPING

- Connect the motorcycle to the diagnostic tool and make sure that the motrocycle is equipped with the latest updated map.
- All maps are available on the Sherconetwork:

INFORMATION → TECHNICAL INFORMATION → INJECTION MAPPING

SHERCO NETWORK			
TYPE	CARTOGRAPHIE D'INJE...	CATÉGORIE	ENDURO
ANNÉE	2024	RECHERCHER	
DATE	DESCRIPTION	FICHIER	VOIR
18/07/2023	254EEFC4_13700 250 SEF FACTORY 2024 AKRA	254EEFC4_13700 250 SEF FACTORY 2024 AKRA	
18/07/2023	304EEFC5_13700 300 SEF FACTORY 2024 AKRA	304EEFC5_13700 300 SEF FACTORY 2024 AKRA	
18/07/2023	514EEFB1 500 SEF FACTORY 2024 AKRA	514EEFB1 500 SEF FACTORY 2024 AKRA	
18/07/2023	454EEFB1 450 SEF FACTORY 2024 AKRA	454EEFB1 450 SEF FACTORY 2024 AKRA	
" 1 1/1 1 "			

SHERCO
AN EMOTION IS BORN

